

# Instructions for Canopy kits

## WARNING:






Electrical Danger




Turn Power Off



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

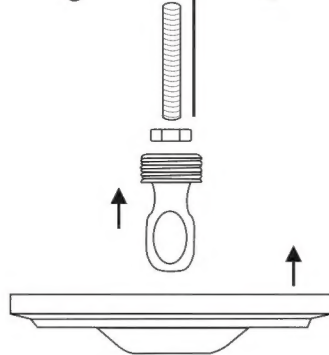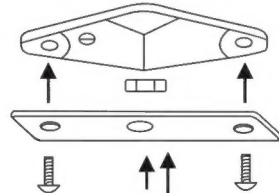

You will need 12 - Med.Bulb  
40 Watts Recommended  
60 Watts Max  
Bulb not included.

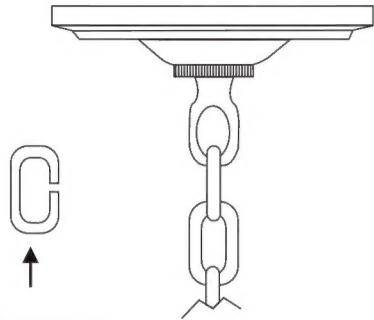

USE THE CHAIN  
PLIERS OPEN &  
CLOSE THE CHAIN.

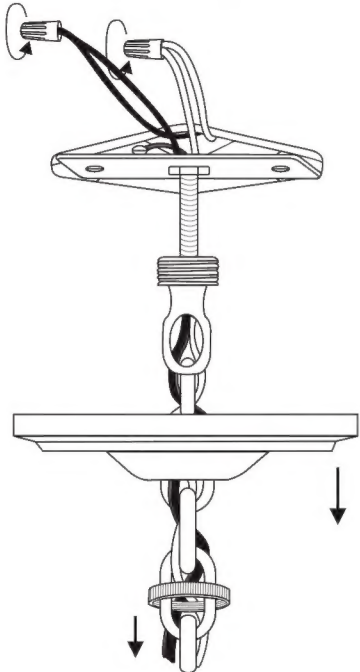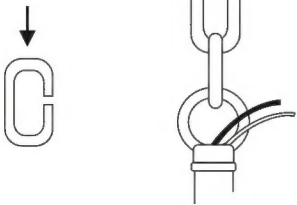

# ITEM NUMBER:# 32325 INSTRUCTIONS



TRIARCH INTERNATIONAL

# MODEL#:32325 ASSEMBLY AND DRESSING INSTRUCTIONS

## Step 1 (Assembly for your fixture)




A ] Carefully unpack your new fixture.


B ] Simply unfold the arms so that all arms are evenly spaced.

C ] Attach each arm to the TOP and BOTTOM decorative ring using the screws supplied.


## Step 2

Hanging the crystal trim to the fixture.

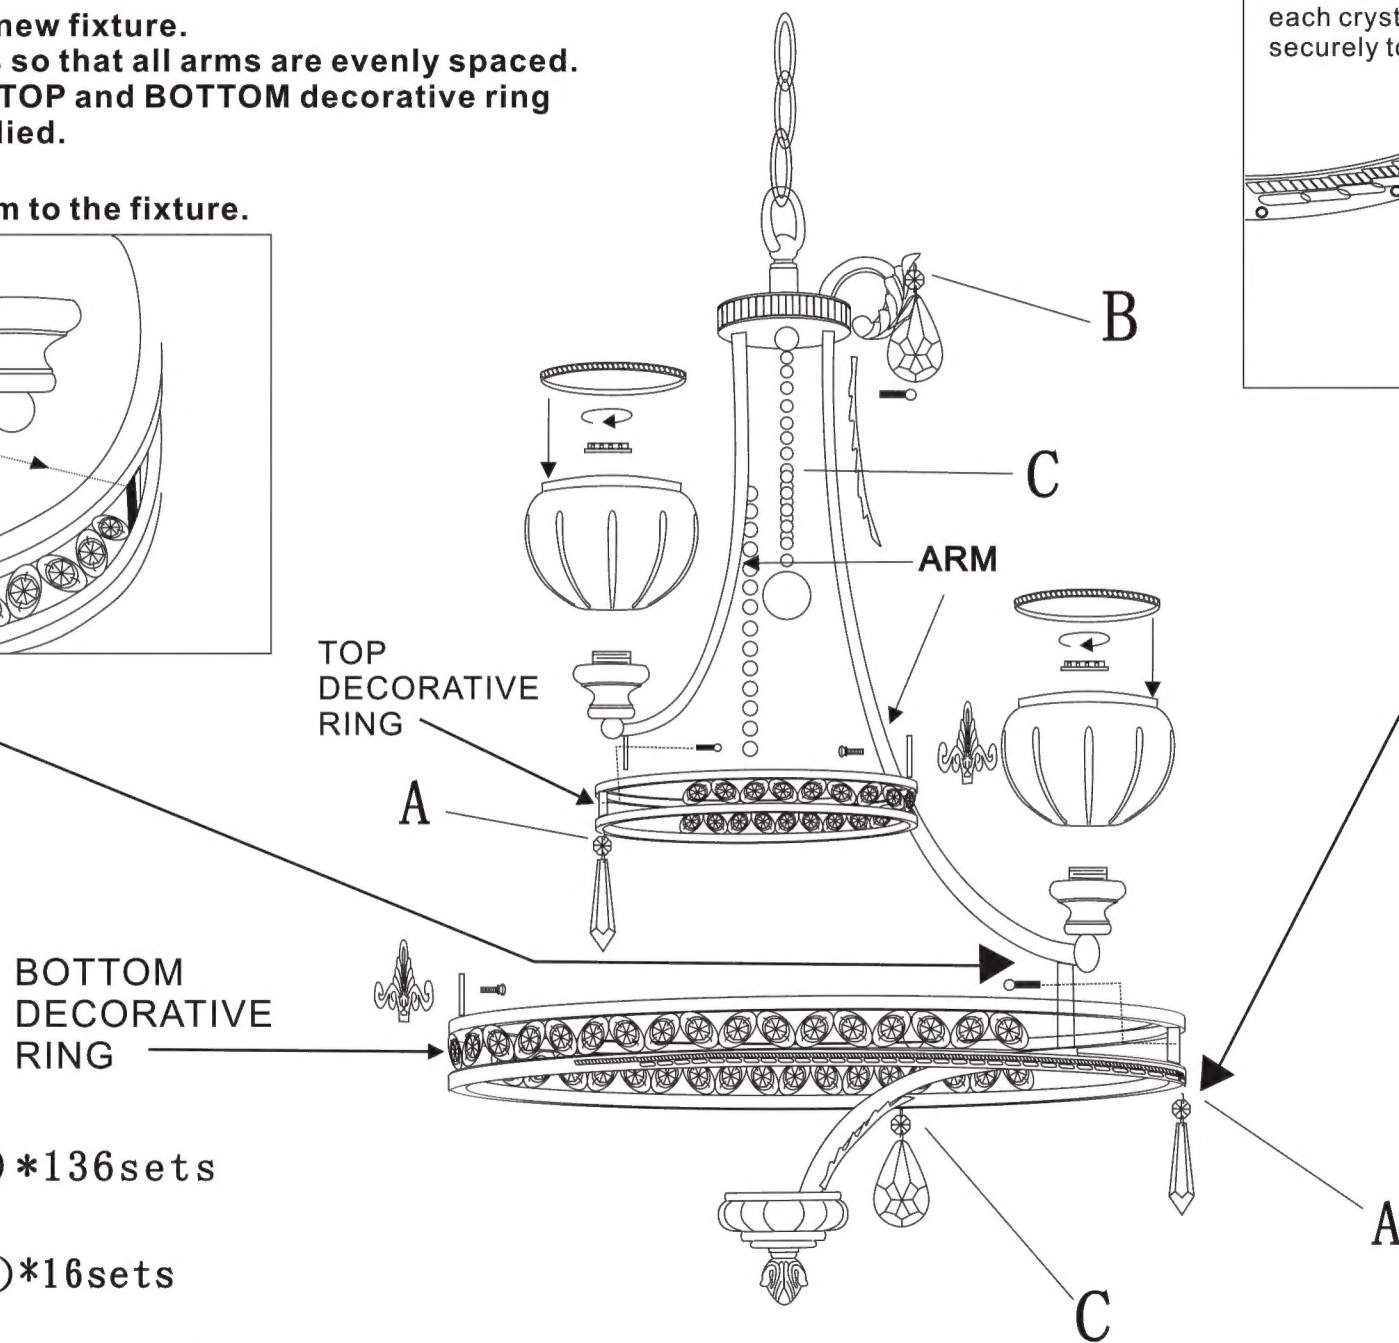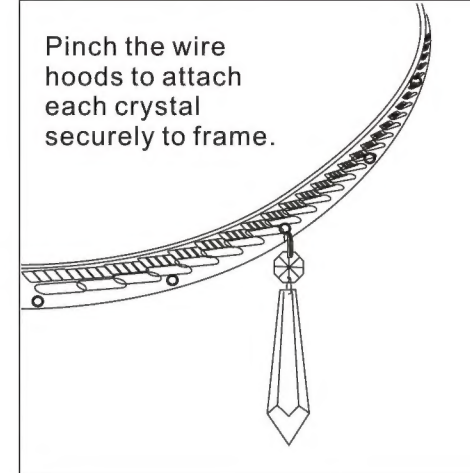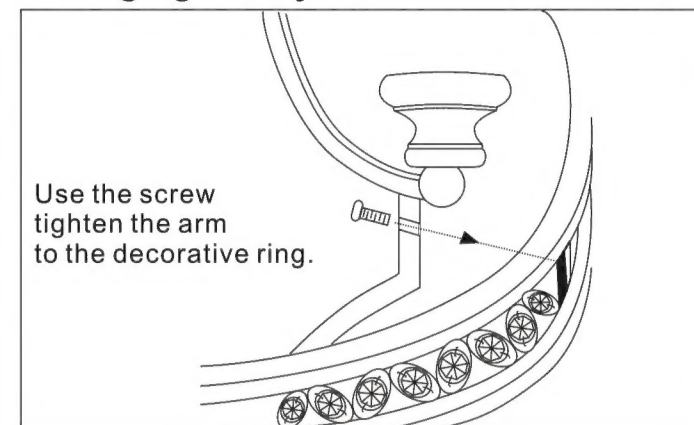

A  (14mm+80mm)\*136sets

B  (14mm+100mm)\*16sets

C  (10mm\*27+50mm)\*1pc